




Spoondrift Spotter.

USER GUIDE

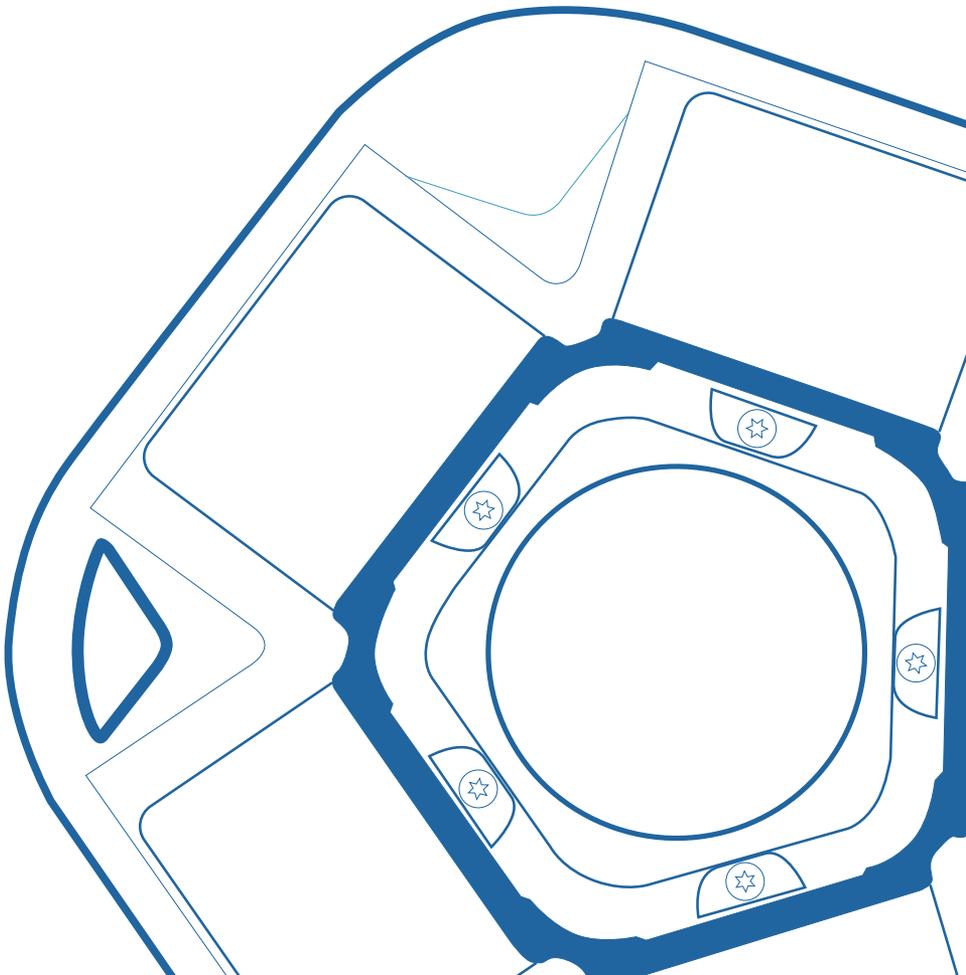

What is included in this box?


Spotter device.

Spotter Toolkit, which includes:

- 5mm hex key to open and close the lid of the Spotter
- 4mm hex key to disconnect electronics box from hull
- lanyard and magnet to switch from idle to run-mode
- USB cable to upload latest firmware
- power charger to charge the battery prior to deployment
- SD card for data storage during deployment (shipped with unit)
- desiccant with tape to attach to inside of hull before deployment

External ballast chain with bow shackle attached.

Spotter User Guide (this document).

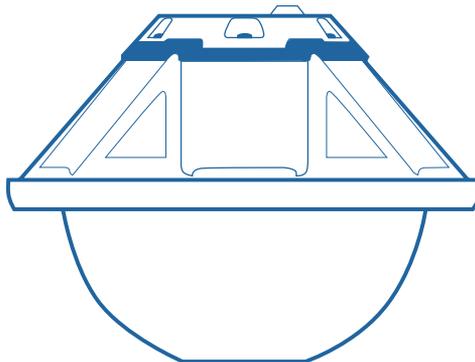

Spoondrift Spotter.

Spoondrift Spotter is an integrated solution for collecting ocean wave data. The Spotter platform consists of a globally-connected Spotter Device ("Spotter") and the online Spotter Dashboard.

The Dashboard provides access to real-time Spotter wave and tracking data, system status and alerts, data visualization, and allows you to configure your Spotter remotely.

Core System Features

2-Way Communication	Remotely change settings on Spotter through online Dashboard
Geofence	Set watch perimeter and receive alerts when Spotter moves outside
Spotter API	Access Spotter via our API for seamless application integration
Track Mode	Fast positional updates for tracking Spotter through the Dashboard.



The Spotter.

The Spotter device is a compact and lightweight instrument consisting of a waterproof hull, solar panel array, and electronics package.

The Spotter is completely solar-powered so you don't have to replace or recharge the battery during deployment. The solar-battery power system is designed to support Spotter even through higher latitudes and limited light conditions.

Core Spotter Features

Surface to hold magnet to activate magnetic mode switch without removing the lid.

Visibility light. Flashes amber for nighttime visibility.

Captive lid screws (5mm hex) so they do not get lost when lid is removed.

Removable, transparent lid for access to product interface.



Marine-grade materials.

Integrated bottom attachment point for external ballast.

Getting Started.

How to get started with the Spotter platform?

1 Set up your account and Spotter. p. 7

2 Set up Spotter device. p. 8

3 Deploy Spotter in the water. p. 12

4 Check your Spotter Dashboard. p. 13

5 Retrieve and Store Spotter. p. 14

1

Set up your account and Spotter.

Set up user account.

Visit <https://spoondriftspotter.co/> to set up your user account. Enter personal details and click 'register'. This will take you to the overview page.

Register your Spotter.

To register your Spotter, click 'register a new device'.

Enter the Spotter ID number and your Activation code, which you should have received by email from the Spoondrift team. If you have not received this, or do not have this available anymore, please contact Spoondrift at support@spoondrift.co.

The Spotter ID number is also listed on the device and starts with SPOT-####. Click 'register'.

You will now see your Spotter listed on the overview page. The map will be updated as soon as the first data message is received, which typically takes 1-1.5 hrs from device power on. Please note that message and data transmission require a clear view of the sky with minimal obstruction.

2

Set up Spotter device.

The spotter device is completely self-powered and can be operated right out of the box.

Check the SD card.

Make sure the system is turned off (on/off switch off) and then check to ensure that the SD card is properly seated.

Turn Spotter on.

Switch the on/off switch to the 'on' position to turn Spotter on. During boot-up the two user LEDs will be orange and after startup switch to green. The Spotter device has two possible operating modes - RUN and IDLE-mode - and you can switch between modes using the provided magnet by holding it at the designated area for 3 seconds. The Spotter device will always boot into the last mode it was in before it was switched off.

IDLE mode

In IDLE mode, the two LEDs alternate flashing green and the visibility light will be OFF.

IDLE mode is to save power and suspend data acquisition and transmission. That way you can switch to RUN mode without having to open the lid.

Use this mode for short-term inactivity, in preparation for deployment (e.g. transport to deployment site).

RUN mode

In RUN mode, the two LEDs are solid green and the amber visibility light flashes periodically.

RUN mode is for full system functionality including: data acquisition, processing, data transmission and on board logging to SD card.

Use this mode during deployment.

Note: Spotter DOES NOT collect data when in idle mode.

IMPORTANT:

- Spotter needs to be switched into RUN-mode for deployment.
- If Spotter is in IDLE mode, you can switch to RUN mode by holding a magnet onto the recessed area directly on top of the electronics box until the lights turn off. Or in case the transparent lid is screwed on, by holding the magnet onto the recessed round area in the lid for 3 seconds.
- The flashing pattern of the 2 user LEDs and the visibility light will reveal which mode Spotter is in.

When switched to RUN mode, the two user LEDs (SYSTEM and GO) communicate system status and signal when the Spotter is ready to deploy.

SYSTEM LED

Communicates the status of system hardware.


GO LED

Communicates the operating state of device, e.g. GPS connectivity, solar and battery charge.

IDLE mode

SYSTEM GO

At startup:



Both solid orange. System is booting up and running self-check.

After startup:



Blinking green. The system is in idle mode. Flashes in alternating pattern between LEDs for 3 minutes and then turns off.

In case DC charger is connected and the spotter is turned off, the following charging light sequence can be monitored to track the charging status of the device. Please note that charging the spotter can take as long as 8 hours.



Both solid green. System is fully charged.



Blinking green. System is charging. Blinks in sync with GO-LED.

RUN mode

SYSTEM GO

At startup:



Both solid orange. System is booting up and running self-check.

After startup:



Both solid green. All systems are checked and OK. Ready to deploy. Both LEDs will time out after 60 minutes to save power.



Blinking green GO LED. System is not solar charging. If this is a night deployment (or the panels are covered), then this is normal and you can deploy. If this is a day deployment, something is wrong with the charging system and you should not deploy.



Solid red SYSTEM LED. Check if SD card is present. If not, turn off system, place SD card, and switch back on. If the red light persists, there may be a serious system error. Do not deploy until this is resolved. In case that the system LED is solid RED, and this cannot be resolved by inserting a freshly formatted and emptied SD card, please contact the Spoodrift team.



Solid red GO LED. Limited GPS connectivity. System may be indoors or no clear view of the sky. If outside, please wait a few minutes while the system establishes a connection with the GPS satellite. If the system has a clear view of the sky and the GO LED remains red for longer than 30 minutes, something may be wrong. In this case, please contact the Spoodrift team.



Both solid red. Do not deploy. Follow instructions for red SYSTEM or GO Led as mentioned above.

3

Deploy Spotter in the water.

Activate Spotter in RUN mode

Switch ON spotter and ensure device is in RUN mode. Ensure both system and status LEDs are green after ~10 minutes with clear view of the sky.

Please note that user LEDs timeout after 60 minutes to save power. After 60 minutes you can see that the system is in RUN mode from the flashing of the visibility LED.

Carefully secure lid.

Secure the lid using a 5 mm hex key and hand-tighten the 5 captive screws using a star pattern. The captive screws will bottom out to avoid overtightening them.

Attach external ballast

Spotter comes with an external ballast chain that should be attached to the ballast attachment point at the bottom of the hull. For proper data collection and operation, the ballast chain must always be attached prior to deployment.

For moored applications: attach mooring to ballast chain.

In case of a moored application, attach the mooring to the end of the external ballast chain.

Note on mooring design.

Spoondrift Spotter can be deployed either as a free-floating drifter or in a moored configuration. For free floating deployments, the Spotter device comes with everything that is required for deployments.

For moored applications, you will need to design a mooring to anchor the Spotter to the seafloor. Spoondrift provides some general guidelines based on our experiences. Spoondrift does not sell moorings, but since we do build moorings for our own Spotters, we share what we have learned from our own testing and from other users. Visit www.spoondrift.co to download our mooring guidelines.

Check your Spotter Dashboard.

Login to your account.

Visit <https://spoondriftspotter.co/> to login to your user account. Once you are logged in you are on the overview page. If your Spotter has been deployed, it will show as a pulsing dot on the map. In that case, Spotter is set up properly and you can access your data.

Currently the dashboard allows you to:

- view realtime surface wave data from your Spotter,
- search and download historical data for a custom data range,
- track your Spotter on the map so you can plot and estimate surface currents or anticipate a retrieval strategy,
- set a geofence so you get notified when the Spotter detaches from its mooring or otherwise moves outside the set boundaries,
- remotely switch the Spotter into either WAVES or TRACK mode. See 'Spotter Measurements'-section in this User Guide to determine which mode you need for your application.
- access our API so you can integrate ocean data into your own applications,
- review health status of your Spotter (battery, system status) and get notified when something is off,
- change your personal profile.

Besides the features as described above, we are constantly developing new functionality for Spotter, so keep an eye on the Spotter dashboard for the latest news and updates.

Note: Instructions for the dashboard were included in the email that you received with your activation code. So please see the Spotter Dashboard Guide for how to access the features as described above.

Retrieve and Store Spotter.

Retrieve the Spotter.

After retrieval, disconnect the mooring or external ballast weight and rinse off Spotter and mooring/ballast weight with fresh water before storage. If any fouling has built up on the Spotter, this can generally be removed with a soft brush and soapy water.

Turn the device off for storage.

After rinsing, dry the area around the lid, and unscrew the lid using a 5mm hex key. Remove the lid carefully to prevent water from dropping onto the electronics box. After the lid is removed, turn the device off using the on/off switch. At this point you can also remove the SD card and download the data stored on the card to your personal computer.

If you plan to store Spotter for a longer period of time, please see the 'Notes on lithium battery use and storage' below. If you plan to deploy after a prolonged storage, we recommend that you use the included wall charger to fully charge the Spotter before deployment. This ensures that the system can startup and operate without delay.

Notes on lithium-ion battery use and storage.

Spotter units are equipped with a lithium-ion battery pack, which is located inside the electronics box. It is important to handle the Spotter device with care to prevent any possible damage to the electronics and battery pack. For prolonged storage (longer than a week), the Spotter device should ideally be stored in a cool ($< 25^{\circ}\text{C}$) and dry area with the battery at a medium charge,

Lithium-Ion battery packs stored at or near full charge for extended periods of time can experience a reduction in battery capacity. Therefore, if planning to store for longer than 1 week we advise that the battery is not fully charged. One way to ensure proper state of battery charge is to run the system for two days without solar power (in a box or dark room) before turning it off and putting it in storage.

Spotter Measurements.

Currently Spotter has two different run modes enabled: Waves mode and Track mode. These two run modes can be accessed remotely through the online Dashboard. Waves mode is the default and will likely be the mode that is used most of the time. In Track mode, the system will provide faster position updates (e.g. for retrieval), but no wave data.

Waves mode

In Waves mode, Spotter collects wave displacement data continuously at 2.5Hz. Every half hour, the system computes the complete cross-spectral matrix and estimates bulk statistics and Spotter geographical location. To save transmission bandwidth, two time-stamped 30-minute updates of bulk statistics are transmitted every hour. So although the data resolution is 30 minutes, the Iridium updates are hourly.

The Standard Waves message payload consists of**:

- Time (epoch),
- Position (latitude and longitude),
- Significant Wave Height - estimated from zeroth-order moment of wave spectrum (H_{m0}),
- Peak Period - period associated with the peak of the wave spectrum (T_p),
- Peak Direction - mean direction at peak of spectrum,
- Peak Directional Spread - directional spreading at peak of spectrum,
- Mean Period - variance-weighted mean period (T_{m01}),
- Mean Direction - variance-weighted mean direction,
- Mean Directional spread - variance-weighted mean directional spread.

** All bulk statistics are computed over frequency range 0.03 – 0.8Hz.
For definitions of various bulk wave statistics see e.g. Holthuijsen (2007).

Track mode

Track mode is designed for faster positional updates of the Spotter device and intended for retrieval of Spotter when in free-drifting mode (or otherwise for tracking). In Track mode messages are transmitted every 15 minutes and the payload contains only positional updates (Spotter does not transmit Wave data when in Track mode). These positional updates can be visualized on the integrated map interface on the Dashboard.

The main purpose of this mode is to track a Spotter and get rapid positional updates for retrieval, which also implies that you will use about 4x more Iridium credits while Spotter is in Track mode.

Although wave data is not transmitted during Track mode, full data is stored to the SD card.

Iridium package

The 1-year Iridium package included with Spotter is based on the standard hourly update rate in Waves mode. Deviations from that can accelerate the use of the Iridium package included with Spotter. For instance, the faster update rate in Track mode will deplete your Iridium budget somewhat faster. In any case, we will alert you when your Iridium package is running low.

Product Specification.

Data and Connectivity

Connectivity	Iridium SBD (satellite)
Data Storage	<ol style="list-style-type: none">1. Full-size 16GB SD card (on-board) - hires displacement time series, spectra and statistics, surface currents, and positions for one year2. Online Dashboard - unlimited real-time wave statistics and tracking data
Applications	Free-drifting: Spotter measures waves, position and surface currents, designed to operate in any current speed. Moored: Spotter measures waves and position.

Onboard Data Analysis

Spectral output	Function of frequency: variance density spectrum, directional moments, mean direction, directional spreading.
Frequency range.	0.033-1 Hz (30s to 1s)
Frequency resolution	0.0098 Hz (default)
Bulk statistics	significant wave height, mean period, peak period, mean direction, mean directional spread, peak direction, peak directional spread

Power, System Upgrade and Monitoring

Primary power source	Solar Powered, 5x 2 Watt, 6 Volt solar panels
Battery	Lithium-ion, capacity 11,200 mAh, 3.7 V (rechargeable)
Firmware Upgrade	Standard micro-USB connector (cable included)
System monitoring	Internal temperature, humidity, and solar charging monitored for system health and included in status update.

Motion Sensing


Onboard motion sensors	GPS and Inertial Measurement Unit
Motion Data Format	easting), northing), elevation, latitude, longitude
Wave frequency range	0.03-1 Hz (30s to 1s)
Wave direction range	0 - 360 degrees (full circle)
Sampling rate	2.5 Hz (Nyquist at 1.25 Hz)
Wave displacement accuracy	approximately +/- 2 cm , practical accuracy depends on field of view, conditions, and GPS system status.
Calibration	Not needed, ever.

Product Specification.

Dimensions and Weight

Weight Total weight 5.4 kg (12 lbs), excludes external ballast chain

Dimensions Width 42 cm (16.4"), height 31 cm (12.2").

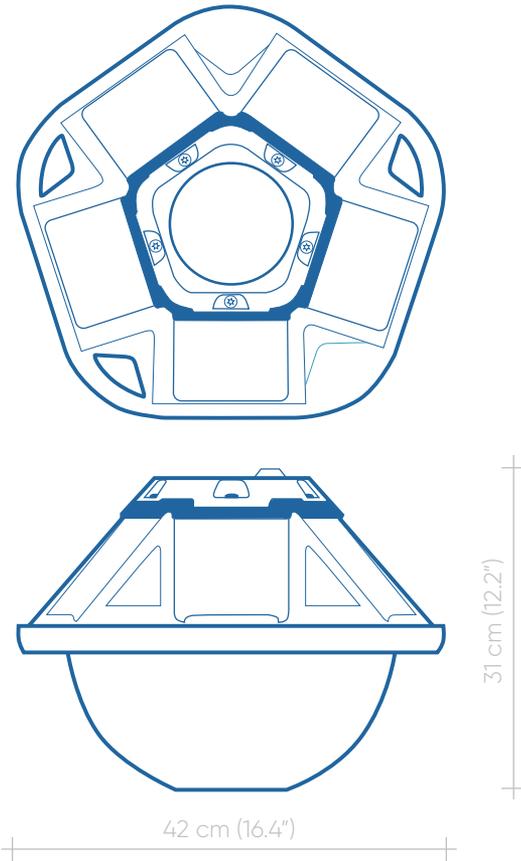

Safety & Compliance.

Trademarks and Patenting

Spoondrift Spotter is patent pending. The Spoondrift logo and the terms "Spoondrift" and "Spotter" are trademarks belonging to Spoondrift Technologies, Inc ("Spoondrift"). All other related designs, text, graphics, pictures, videos, or any other proprietary intellectual property included with this purchase are the property of Spoondrift or its vendors or licensors.

Terms and Policies

Your purchase and use of Spotter, including any associated software, is subject to the following Spoondrift policies:

Spoondrift Terms of Sale

<https://spoondrift.co/pages/terms-of-sale>

Spoondrift Terms of Use

<https://spoondrift.co/pages/terms-of-use>

Warranty Policy

<https://spoondrift.co/pages/terms-of-sale#Warranty>

Return Policy

<https://spoondrift.co/pages/return-policy>

Should you have any questions about these policies or your rights and responsibilities relating thereto, please contact Spoondrift at support@spoondrift.co

Safety & Compliance.

FCC Compliance Statement.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. Changes or modifications next expressly approved by Spoodrift could void your warranty and your authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operations.

This device contains a certified transmitter module which is located in the electronics package, FCC number Q639603N.

Safety and Handling Considerations

As with any marine activity, take caution when deploying your Spotter. Ensure that you are familiar with the operation of your watercraft and have the necessary safety gear and safety precautions in place prior to your deployment. Secure your Spotter while it is in transit so that it is not lost or damaged. When deploying your Spotter from a boat, stay clear of all lines, especially when deploying a mooring weight.

Your Spotter contains a lithium-ion battery. Do not attempt to replace the battery yourself—you may damage the battery, which could cause overheating, fire, and injury. Do not drop Spotter onto hard surfaces or subject the Spotter to extreme temperatures (below -20C or above 45C) or fire as doing so may damage the Spotter or its battery. Dispose of batteries according to your local environmental laws and guidelines.

Any damage caused to your Spotter by incorrect use or unauthorized modification or disassembly may void your warranty. You are responsible for following all laws and securing all necessary permits required for your application.

Disposal Guidelines

Spotter's electronic components and the lithium-ion battery are not generally suitable for disposal in standard municipal waste systems. Please contact your local provider to determine proper disposal and recycling options. If in doubt, please contact us at support@spoondrift.co to discuss recycling options for your Spotter.



SpoonDrift Technologies, Inc.
PO Box 1533
El Granada, CA 94018-1533
USA

email support@spoonDrift.co
phone +1 (650) 761-1561
visit www.spoonDrift.co

Copyright 2017, SpoonDrift Technologies, Inc.
Version: ENG-201709